


## SERIES ZC CHARACTERIZED BALL VALVE INSTALLATION INSTRUCTIONS

## **IMPORTANT**

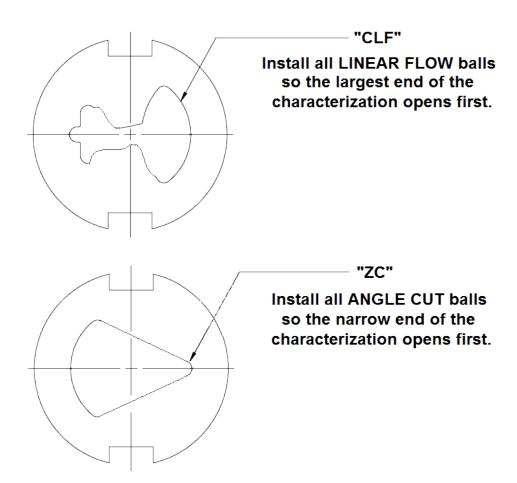

All Series ZC characterized balls must be oriented as shown so the appropriate end opens FIRST to achieve the intended flow performance. All angle cut balls must open narrow end first; all linear style-CLF must open larger end first.

For additional assistance please contact <a href="mailto:info@plastomatic.com">info@plastomatic.com</a> or call +1 973-256-3000 for our technical team.

